## Water Sensor with Relay Contact

WWW.GRISK.COM

Will detect any conductive non-flammable liquid
Ideal anywhere water damage could occur
Automatic reset
6 ft jacketed lead standard
Custom lead length available
Available in 5 VDC, 12 VDC and 24 VDC
Closed and Open loop versions

Undetected water damage, such as that caused by leaking pipes or corroded water heaters, cost homeowners tens of thousands of dollars each year. Such repairs are time consuming and costly to correct. Applications could include computer room sub-floor areas, telephone equipment rooms, bathrooms, laundry rooms, any areas adjacent to a water storage tank or piping. Also evaporative air conditions, drip pans, overflows and/or drains.

Using no mechanical parts, the GRI Water Sensors are triggered by a moisture bridge across the sensor contacts. The GRI Water Sensors can be installed to detect a layer of water as minute as 1/16 of an inch in depth.

**The 2600 Closed Loop Sensors** use an external power source to energize a built-in relay contact so battery power is not recommended. Used in a closed loop configuration, an alarm condition will occur when moisture is detected, or if power to the sensor is lost, and if the sensor should fail. The relay output can be wired directly to any alarm panel or can be used to actuate an external device, i.e. transmitter, annunciator, etc.

In sump pumps and areas of high humidity, GRI recommends a low sensitivity version: 2600-LS, 2600T-LS.

The 2500 Open Loop Sensors use an external power source which will energize a built-in relay contact when water is detected. With the configuration the sensors are not fail safe. The relay output can be wired directly to any alarm panel or can be used to actuate an external device, i.e. transmitter, annunciator, etc.

Part Numbers		
<u>Closed Loop</u>	<u>Configuration</u>	
2600/2600T	Normally Closed for a closed loop circuit 12 Volts DC	
2600-LS/2600T-LS	Normally Closed for a closed loop circuit 12 Volts DC low sensitivity	
2600T-P	Remote sensor with 36" leads (works with 2600T and 2500T)	
2605	Normally Closed for a closed loop circuit 5 Volts DC	
2624	Normally Closed for a closed loop circuit 24 Volts DC	
2600K	Normally Closed for a closed loop circuit 12 Volts DC (w/1-2600T-PHS sensor)	
2600T-PHS	Remote sensor case with terminal connections for 2600K and 2500K	
Open Loop	Configuration	
2500/2500T	Normally Open for an open loop circuit 12 Volts DC	
2600T-P	Remote sensor with 36" leads (works with 2500T and 2600T)	
2505	Normally Open for an open loop circuit 5 Volts DC	
2524	Normally Open for an open loop with 24 Volts DC	
2500K	Normally Open for an open loop circuit 12 Volts DC (w/1 - 2600T-PHS sensor)	
2600T-PHS	Remote sensor case with terminal connections for 2500K and 2600K	

WARRANTY: One year warranty against workmanship, material and factory defects.

GEORGE RISK INDUSTRIES, INC. G.R.I. PLAZA KIMBALL, NE 69145 WWW.GRISK.COM



TOLL-FREE 1-800-445-5218 TOLL-FREE 1-800-523-1227 (308) 235-4645 FAX (308) 235-3561 E-MAIL: sales@grisk.com

2500/2600

2500T/2600T

C\_ES 5 Water Sensor Relay 2500 2600

## Water Sensor with Relay Contact



WWW.GRISK.COM

## INSTALLATION INSTRUCTIONS:

GRI 2505, 2605, 2600, 2524, and 2624 Water Sensors: When connecting these sensors to the panel, the red wire is connected to the positive side of the positive side of the auxiliary power supply and the black wire is connected to the negative. The green and white wires can then be connected to the pre-selected Closed Loop zone. A resistor can be connected in series with either the green or white wire for those panels that require end-of-line resistors.

GRI 2500T, 2600T, 2500T-P, 2600T-P, 2524T, 2624T, 2500K and 2600K Sensors: Provide a means of detecting water in difficult to monitor locations, such as under carpets an in drop ceiling panels. This is accomplished by mounting 1 or more 2600T-P or 2600T-PHS's in various locations around the area to be monitored, then run the senor wires to the terminal screws on the 2600T or 2624T. These can then be wired for power as described above the 2600 Water Sensor. The 2500T and 2600T include two 2600T-P sensors. (A maximum of ten 2600T-P's can be connected to each 2600T.) The 2500K and 2600K include one

2600T-PHS sensor.

After installation these units should be tested with a damp sponge or paper towel and inspected annually. If there is any corrosion or damage the sensor should be replaced.

Closed Loop Specifications			
Power Requirements:			
2600 Operating Voltage 2605 Operating Voltage	12 Volts DC 5 Volts DC		
2624 Operating Voltage	24 Volts DC		
Operating Current Wire Contacts:	12 mA		
Red Wire	+12 Volts DC		
Black Wire	-Ground		
Green Wire White Wire	Relay Contact Relay Contact		
Contact Characteristics:			
Contact Resistance	100mΩ		
Switching Voltage Switching Current	30 VDC Max 500 mA Max		
Power	250 mW Max		
*Note: Battery power not recommended.			



WARRANTY: One year warranty against workmanship, material and factory defects.

GEORGE RISK INDUSTRIES, INC. G.R.I. PLAZA KIMBALL, NE 69145 WWW.GRISK.COM



TOLL-FREE 1-800-445-5218 TOLL-FREE 1-800-523-1227 (308) 235-4645 FAX (308) 235-3561 E-MAIL: sales@grisk.com