Liquid Level Detector



WWW.GRISK.COM



APPLICATION:

The GRI 2826 detector was designed in response to a direct request for a small electronic sensor capable of detecting non-volatile liquids in remote hard to reach locations. The sensor, in conjunction with your favorite wireless transmitter, can be used to detect and report the encroachment of non-volatile liquids into an isolated sensitive location.

The new 2826FS from GRI provides remote probes plus a *fail safe* capability. When the on board battery expends the last of its power, 3 to 5 years under normal conditions, the 2826FS automatically places itself in a safe mode to help prevent danger to devices, properly and/or people. This *safe* mode keeps



the zone assigned to the 2826FS in an alarm condition. This causes an authorized person or an alarm technician to physically inspect the 2826FS and replace the batter, prior to resettling and re-arming the system.

DESCRIPTION:

The GRI 2826 detector is an internally powered, microprocessor controlled device that samples the conductivity between any two adjacent sensor points located on the bottom of the device. Power consumption is less than 1 micro-amp while in the standby mode. This allows for an extended duty cycle.

Relay contacts are latched in an open or closed position based on the conductivity measured between the sensors. External wire connections are provided to allow access to the C form relay contacts for output control of an external device.



WARRANTY: One year warranty against workmanship, material and factory defects.

GEORGE RISK INDUSTRIES, INC. G.R.I. PLAZA KIMBALL, NE 69145 WWW.GRISK.COM



TOLL-FREE 1-800-445-5218 TOLL-FREE 1-800-523-1227 (308) 235-4645 FAX (308) 235-3561 E-MAIL: sales@grisk.com

ⁱ .64 in ⁱ (16.3 mm)

Liquid Level Detector



WWW.GRISK.COM

INSTALLATION INSTRUCTIONS

2826 Liquid Level Detector

To install the GRI 2826 detector, place the unit where liquid is most likely to accumulate. Clean and dry the desired placement location. A smooth surface is preferable and preparing surface by using an alcohol wipe is recommended. Remove protective paper from double sided tape, then stick the unit to the cleaned surface.

To connect the 2826 detector wires to an external device, see the installation instructions for that device.

Use the white and red wires for a closed loop circuit, or the white and black wires for an open loop circuit. After installation these units should be tested with water and inspected annually. If there is any corrosion or damage the sensor should be replaced.



at locations where liquid pooling is most likely to occur. Run probe wires from sensor probes to the detector relay and connect wires to sensor terminals. Wire all sensor probes in parallel.

Specifications Probe with 36" leads

Battery with connector

Contact Rating:

Nominal Switching Capacity Max. Switching Power Max. Switching Voltage Max. Switching Current Max. Number Sensor Probe

Battery life

2826FS Liquid Level Detector

Use the relay contact terminals to connect to external devices such as wireless transmitters or connect directly to alarm or controller systems. After installation these units should be tested with a damp sponge or paper towel and inspected annually. If there is any corrosion or damage the sensor should be replaced.

GEORGE RISK INDUSTRIES, INC. G.R.I. PLAZA **KIMBALL. NE 69145** WWW.GRISK.COM

Max. Wire length for detector to probe



GRI #8444

10

100 foot

TOLL-FREE 1-800-445-5218 TOLL-FREE 1-800-523-1227 (308) 235-4645 FAX (308) 235-3561 E-MAIL: sales@grisk.com